
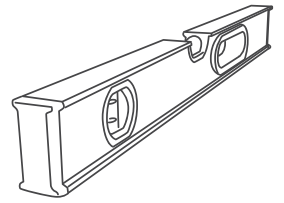
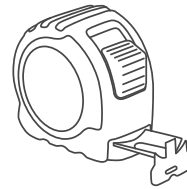


Modular Upstand Install Guide

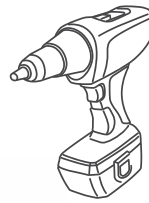

1.

Lay out panels and set aside fixings

OVER 2.9M
Split and Spline

**IF UPSTANDS ARE OVER 2.9M
WILL BE SPLIT WITH SPLINES**

A.

Silicone join and push male and female bottom panels into each other

B.

Fix with Screws provided

4 x 60mm screws
4 x 50mm screws

Repeat on step
A & B on all splits

2.

Silicone corners and push male and female bottom panels into each other.

3.

Fix with screws provided

2 x 80mm screws
1 x 50mm screws



Repeat step 5 and 6 on each corner

4.




When the upstand is fully assembled place over the opening. Before fixing make sure the upstand is square by measuring corner to corner.

5.

Make sure the upstand is level across the top and bottom and make any adjustments needed.

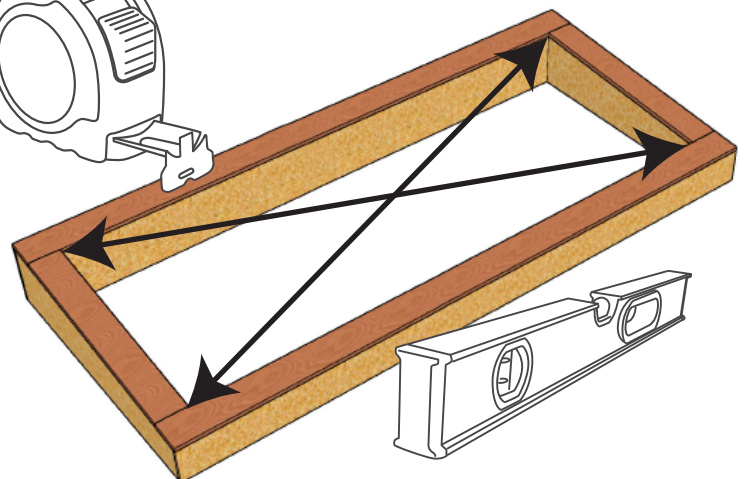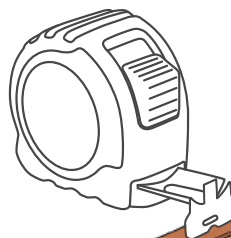

Modular Uprand Install Guide

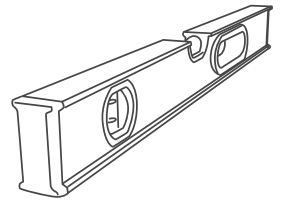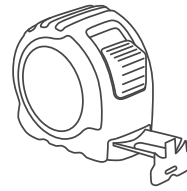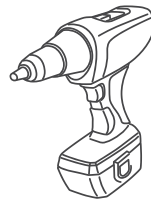

6.

Bracket **100mm**
from corners


Max **600mm**
At least 2 brackets
per side

**Brackets
by others**

You can fix the upstand down with brackets. We recommend at least 2 brackets per side at **600mm** centres and **100mm** from each corner

Fire resistant plasterboard
should always be fitted
internally (by others)

7.

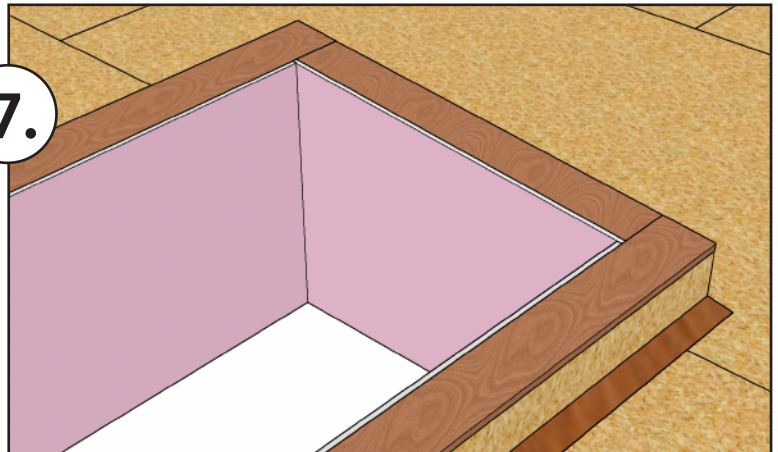

8.

Weathering membrane is now ready to be installed and rooflight to be placed on top and fixed.

WARNING!

Once installed the upstand should not be left exposed to the elements. The upstand should be covered until the weathering is applied and rooflight installed.

